

## ROLLACOVER SPECIAL LVL DETAIL RECOMMENDATION SHEET

LVL's FOR SILLS - MAKE SURE THAT THE ROLLACOVER PLAN IS FOLLOWED BASED ON THE DETAILS DEFINED WITHIN AT A MINIMUM FOR THE BEST SITE PREPARATION

BOLTING PATTERN:
PLAN VIEW
RECOMMENDED 16"
ON CENTER IN LENGTH

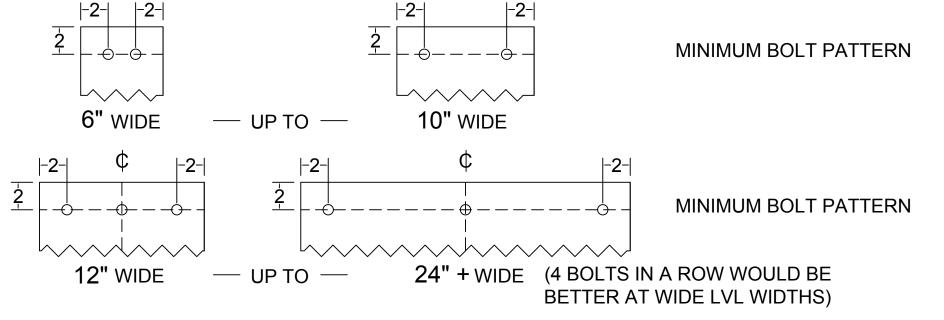

- THIS ABOVE IS AN EXAMPLE WITH ALL BOLTS WITH WASHERS COUNTERSUNK
- SILLS ARE TO BE 1/4" PER FOOR PITCHED TO THE OUTSIDE. NO LESS, NO MORE WITH NO CUPS, BOWS, CROWNS, OR DEVIATIONS EVEN AT ANY SEAMS.
- ALL LVL's NEED TO BE FULL WIDTH WITH NO HORIZONTAL SEAMS

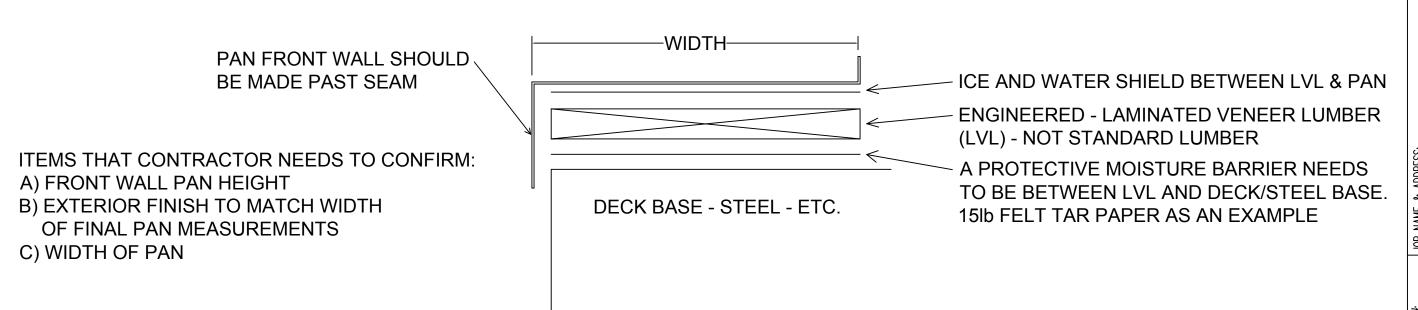

INT www.rollacover.com COVER 36 SARGENT DR. BETHANY, CT 06524 DRAWN BY: SCALE: LVL BOLTING PATTERN RECOMMENDATION ORIGINATION 12-19-18 RAC-LVLPAT-01A OF 1